


CLEAR VIEW FILTRATION PART # 495 4" HI-FLOW AND SCREW-ON FILTER BRACKET KIT DIRECTIONS
MORE PRODUCTS AND INFORMATION AT: WWW.CLEARVIEWFILTRATION.COM OR WWW.BILLETCONNECTION.COM

THIS BRACKET KIT IS DESIGNED SO THE MOUNTING BRACKET CAN BE MOUNTED TO A FLAT SURFACE OR TO THE END OF THE DRIVERS SIDE HEAD OF A SMALL BLOCK CHEVY USING BRACKET KIT PART # 485 OR BIG BLOCK CHEVY USING BRACKET KIT PART # 490 AND MOUNT TO THE END OF 4" FILTER ASSEMBLIES SO THE INLET AND OUTLET PORTS RUN STRAIGHT ACROSS FROM THE MOUNTING SURFACE.



THE FILTER SHOULD BE MOUNTED SO THE SUPPLY LINES ARE LEVEL OR GOING UP SLIGHTLY TO THE FILTER ASSEMBLY. THIS WILL ALLOW THE FILTER TO BE EMPTIED OF OIL OR FLUID AND STAY EMPTY UNTIL THE ENGINE IS STARTED.



**PART# 495 AND # 485
BRACKET KIT WITH A
4" SCREW ON FILTER
ASSEMBLY INSTALLED**

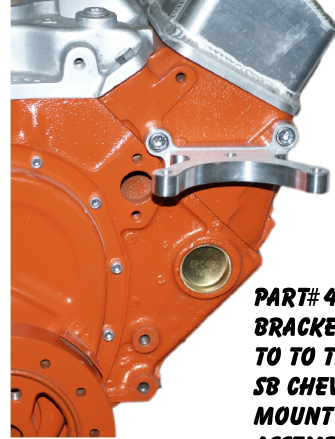

**PART# 495 AND # 485
BRACKET KIT BOLTED
TO TO THE END OF A
SB CHEVY READY TO
MOUNT 4" FILTER
ASSEMBLY.**

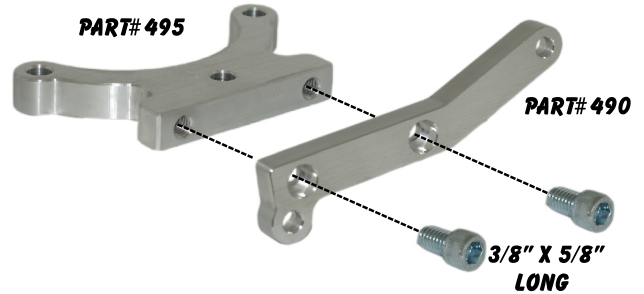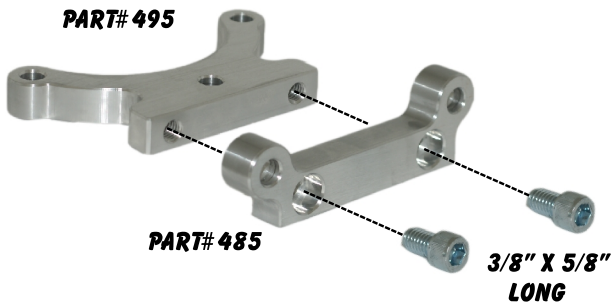

(IMPORTANT!! READ BEFORE INSTALLING!!)

STEP 1 - BOLT BRACKET KIT PART# 495 TO EITHER PART # 485 WHEN MOUNTING THE FILTER ASSEMBLY TO THE CYLINDER HEAD OF A SMALL BLOCK CHEVY, OR PART # 490 WHEN BOLTING IT TO A BIG BLOCK CHEVY. USE A LITTLE BLUE LOCK TIGHT ON THE THREADS OF THE BOLTS AND TIGHTEN.

STEP 2 - WHEN MOUNTING BRACKET KIT PART # 495 TO A FLAT SURFACE, THE MOUNTING FLANGE'S CENTER TO CENTER OF THE MOUNTING HOLES IS 2.600" APART. THEY ARE THREADED FOR A 3/8" COARSE THREAD OR 16 THREADS PER INCH BOLT.

STEP 3 - HOLD THE FILTER ASSEMBLY WITH BRACKET BOLTED TO THE FILTER ASSEMBLY WHERE THE DESIRED MOUNTING LOCATION IS AND MAKE SURE THE TOP OF THE FILTER ASSEMBLY IS LEVEL AND MARK WHERE THE CENTER OF THE 3/8" MOUNTING HOLES ARE IN THE BRACKET, ONTO THE FLAT SURFACE THE FILTER ASSEMBLY IS BEING MOUNTED TO. THE CENTER TO CENTER SPACING FOR THE MOUNTING HOLES IS 2.600" APART. THEN DRILL 13/32" HOLES WHICH ARE SLIGHTLY LARGER THAN 3/8" THROUGH THE MOUNTING SURFACE.

STEP 4 - YOU WILL NEED 3/8" COARSE THREAD MOUNTING BOLTS OR MOUNTING STUDS FOR THE FILTER BRACKET. IF USING EITHER BRACKET KIT PART # 485 OR # 490, THEN THOSE KITS WILL HAVE THE TWO ALLEN HEAD BOLTS TO MOUNT TO BRACKET KIT PART # 495.

STEP 5 - WHEN USING PART # 485 OR # 490, AFTER BOLTING THE TWO BRACKETS TOGETHER MOUNT THEM TO THE END OF THE DRIVERS SIDE HEAD. NOW BOLT THE FILTER ASSEMBLY TO THE BRACKET KIT AND HOOK UP LINES.

FOR QUESTIONS CALL CLEAR VIEW FILTRATION AT 509-467-7584 AND MORE INFORMATION GO TO WWW.CLEARVIEWFILTRATION.COM